



[*Rain Jacket*]



Thank you for purchasing the PROMASTER RAIN JACKET. For the best performance, please read these instructions carefully before using.

The PROMASTER RAIN JACKET is designed for small to medium size SLR cameras. This sturdy and convenient camera rain jacket is designed to protect your digital camera in inclement weather. It can allow you to keep shooting if you are suddenly caught by a rain shower. The PROMASTER RAIN JACKET is quick and easy to install. There is access to all of the camera and lens controls via two side sleeves. It also comes with a transparent window that enables easy monitoring. The full length double zipper allows you to close the bottom when holding the camera in your hands or when it is mounted to a tripod.

Maximum Camera Size

The PROMASTER Rain Jacket will adequately protect cameras that measure 5.9 x 4.5 x 3 in. /150 x 112 x 75mm or smaller.

Features

- Access to all camera and lens controls via two side sleeves
- A clear transparent window enables easy monitoring
- Full-length double zipper provides bottom closure
- Fully adjustable lens sleeve for the best fit

Parts Identification



- 1) Transparent window
- 2) Lens sleeve
- 3) Side sleeve
- 4) Side sleeve
- 5) Zipper
- 6, 7, 8) Sleeve Adjustment Cord

Installing the rain cover on the camera

Step one

Unzip the zipper, then slip the rain jacket over your camera.



Step two

Insert the lens barrel into the rain cover's lens sleeve and adjust the position of the transparent window.



Step three

Fasten the rain cover at the front of the lens with the sleeve adjustment cord. You can also use the elastic band inside the rain cover to adjust the lens sleeve so that it provides the best cover for the lens.



Step four

Put your hands through the two side sleeves to control the camera. The sleeve adjustment cords can be used to adjust the fit.



Product Maintenance

- Use a clean, dry cloth to wipe off any water or moisture on the rain cover and then put the rain jacket to a cool, dry place for storage.
- Use a wet cloth to remove any dirt from the rain jacket. Do not wash the rain cover in a washing machine.
- Drying the rain cover in the sun for a prolonged period may cause discoloration.
- **Product specifications and external appearance are subject to change without notice.**

Disclaimer

When properly installed, this rain jacket is designed protect the camera and lens from light rain and drizzle. Depending upon the conditions, it may not completely prevent water from reaching your equipment. Determining if this product is suitable for the conditions is the sole responsibility of the user. Water damage to any equipment which may be incurred during the use of this product is sole liability of the user and is not subject to any conditions of warranty of this product.

Code 6864

Made in China

Keep in Touch

For more information, tutorials, industry news and tips & tricks, make sure to visit us at promaster.com, follow our feeds on Twitter @promasterphoto, and subscribe to our YouTube ProMasterChannel.

ONE YEAR UNCONDITIONAL GUARANTEE

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.

www.promaster.com | Fairfield, CT 06825